

WOCD Information

Window Opening Control Device

Window Opening Control Devices (WOCD) are available on our Starmark Evo Advanced Polymeric Composite Double Hungs (7500 Series) and Casements (CA 7500 Series). As of 2018, more states are adapting this feature into their window manufacturing and installation regulations. The benefit of these latches is the added precaution it gives you and your family. When activated, the device will allow the window to be opened no more than four inches. If you would like to open the window fully, you can deactivate the device and when you close the window the device automatically reactivates.

The WOCD is available in White, Matte Bronze, Antique Brass, and Brushed Nickel for Starmark Evo Double Hungs (7500 Series) as well as a standard option for our Starmark Evo Casements (CA 7500 Series).

Double Hung Dual Action WOCD Latch:

WOCD device is located on the outer sides of the top sash.

- 1. Raise the window sash, ensuring that the device is activated and the window is limited from opening more than four inches.
- While the window is closed, disengage the device by pushing the orange tab down and then pushing the outer tab in to release it. The window should now be able to open beyond the limit position.
- 3. To reactive, simply lower the sash and the device will automatically reactivate. The window should once again be limited from opening beyond four inches.





WOCD device is located on the outer sides of the top sash.

Casement WOCD:

WOCD device is located on framing of the window.

- Open the casement window ensuring that the device is activated and the window is limited from opening beyond four inches.
- 2. While the window is open, press the red button and slide the wire down to release. Continue to open the window beyond the limit position. The window should now be able to fully open.
- To reactivate, simply close the window, allowing the WOCD to automatically engage again. When re-opening the window, it should once again be limited from opening beyond four inches.





WOCD device is located on framing of the window.

If at any point you notice that your WOCD device is not operating correctly or is no longer effective, please contact your certified dealer to order replacement parts.